

ADDICTIVE DESERT DESIGNS

2010 - 2014 FORD RAPTOR FRONT BUMPER VALANCE SUPPORT BRACKETS INSTALLATION INSTRUCTIONS

PREPARATION STEPS

1. Disconnect the negative terminal on the battery, with the vehicle on level ground and the emergency brake set.
2. You will need the following tools:
 - a. 7/16" Wrenches x 2
 - b. 3/4 Wrench
 - c. 3/4 Socket
3. Hardware Included:
 - a. Valance Support Bracket x 2
 - b. 7/16" bolts x 2
 - c. 7/16" Locking Nuts x 2
 - d. Washers x 4

Front Bumper Valance Brackets




INSTALLATION INSTRUCTIONS

1. After installing you're A.D.D. bumper, loosen the top inner mounting bolts.



2. Install the A.D.D Valance Support Brackets onto the frame with the notch towards the center of the truck.

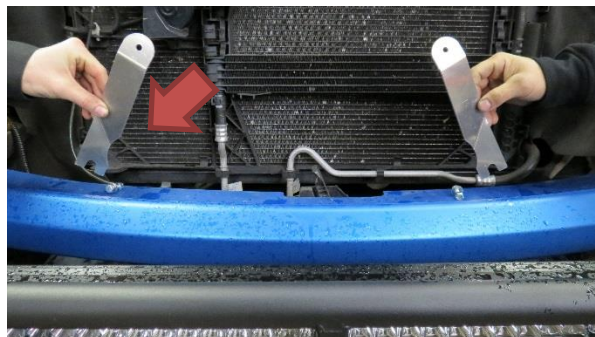

3. Attach the top part of the A.D.D. Valance Support Bracket to the available holes in the valence. Place and Tighten the 7/16" bolts provided.



4. Adjust the valance into desired position and tighten the A.D.D. Valance Support Bracket to the frame using a 3/4" socket or wrench.



5. Step back and enjoy your new A.D.D. Bumper.

For additional support or technical questions,
please call 480.671.0820 or
email: info@addictivedesertdesigns.com

ADDICTIVE DESERT DESIGNS
4840 E. JASMINE STREET SUITE 112
MESA, AZ 85205
WWW.ADDICTIVEDESERTDESIGNS.COM