

2019-23/GMC/CHEVY 1500


BED CAB MOLLE

AC1402101NA

AC1404401NA

AC1404601NA

AC1404501NA

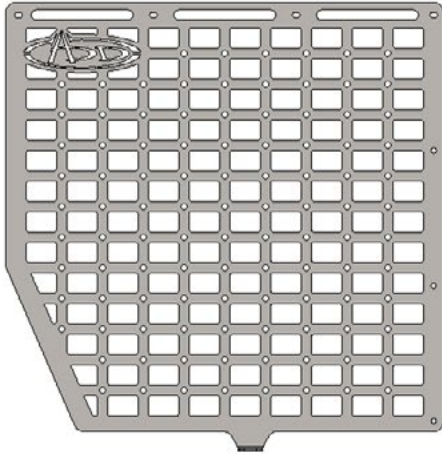

TOOLS REQUIRED

- (Socket) 7/16
- (Wrench) 7/16
- (Allen) 5/32
- (Drill Bit) 25/64
- Rivet Nut Hand Tool
- Ratchet



TIME REQUIRED

- 1 hours for OEM Removal/molle Install



SKILL LEVEL

-Easy/Intermediate



INCLUDED IN KIT

- (18) 1/4-20 X 3/4" Button Head Bolt
- (24) 1/4" Flat Washer
- (6) 1/4-20" Nylon Lock Nut
- (12) 1/4-20" Rivet Nut

⚠️ WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION ⚠️

-BEFORE YOU INSTALL THIS KIT-

Read and understand all instructions, warnings, cautions, & notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service (480) 671-0820

Addictive desert designs is *not* responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components.

We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle.


Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information:

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover

ALWAYS WEAR EYE PROTECTION WHEN OPERATING POWER TOOLS

HARDWARE/PARTS

A.

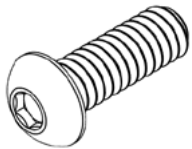

1/4-20 X 3/4" BUTTON HEAD BOLT

QTY: 18


A1.



1/4" FLAT WASHER

QTY: 24

A2.

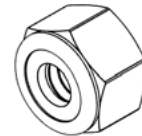

1/4-20" NYLON LOCK NUT

QTY: 6

B.



1/4-20" RIVET NUT

QTY: 12



Reference this page throughout the install

BED CAB MOLLE 2019-23/GMC/CHEVY 1500

INSTALL

□ STEP 1

Using a (5/32 allen) and a (7/16 wrench), assemble the bed cab molle with the provided (A, A1, A2) 1/4-20 X 3/4" button head bolts, 1/4" flat washer, and 1/4-20" nylon lock nuts as shown below.

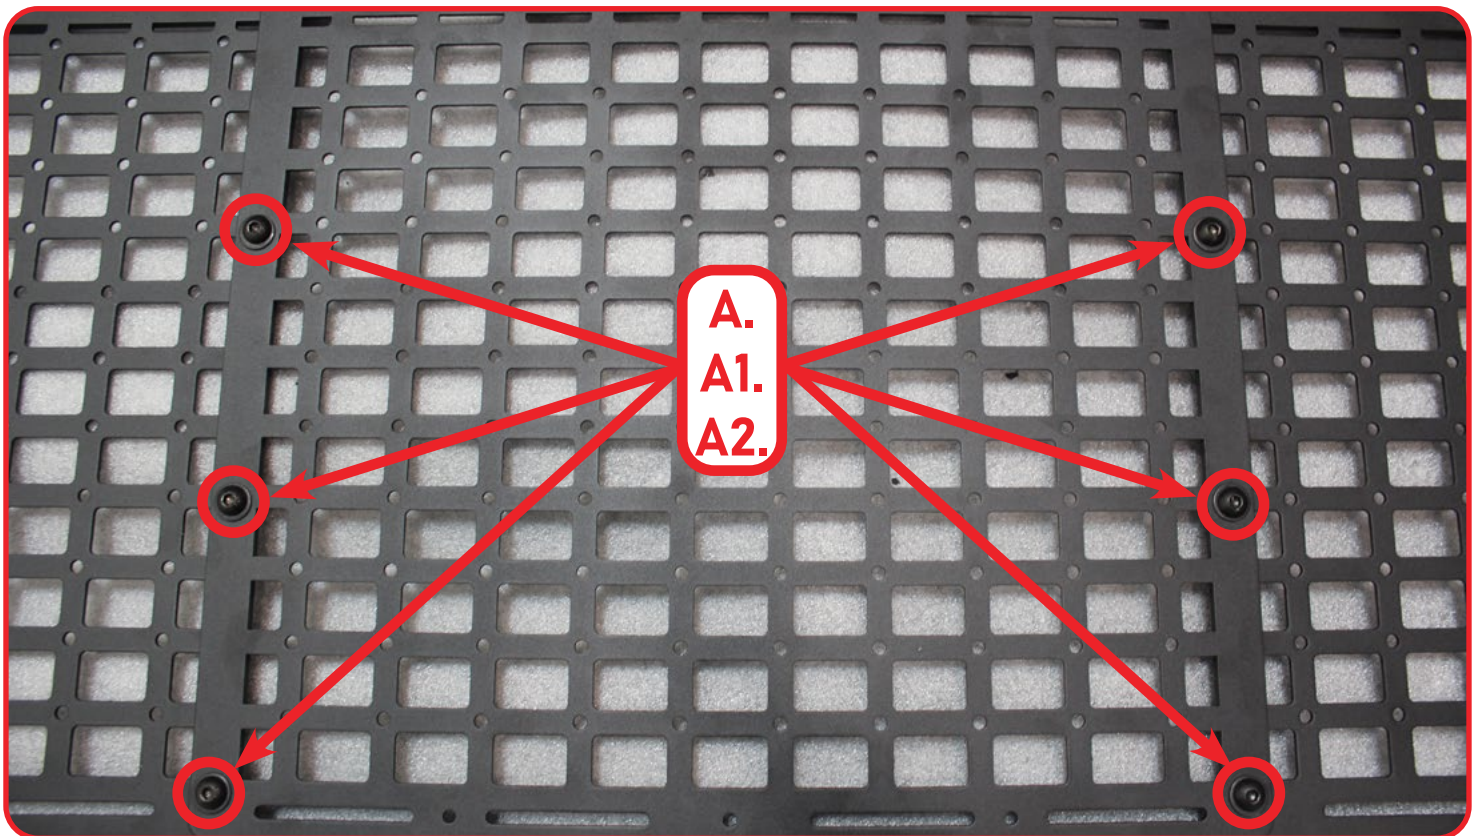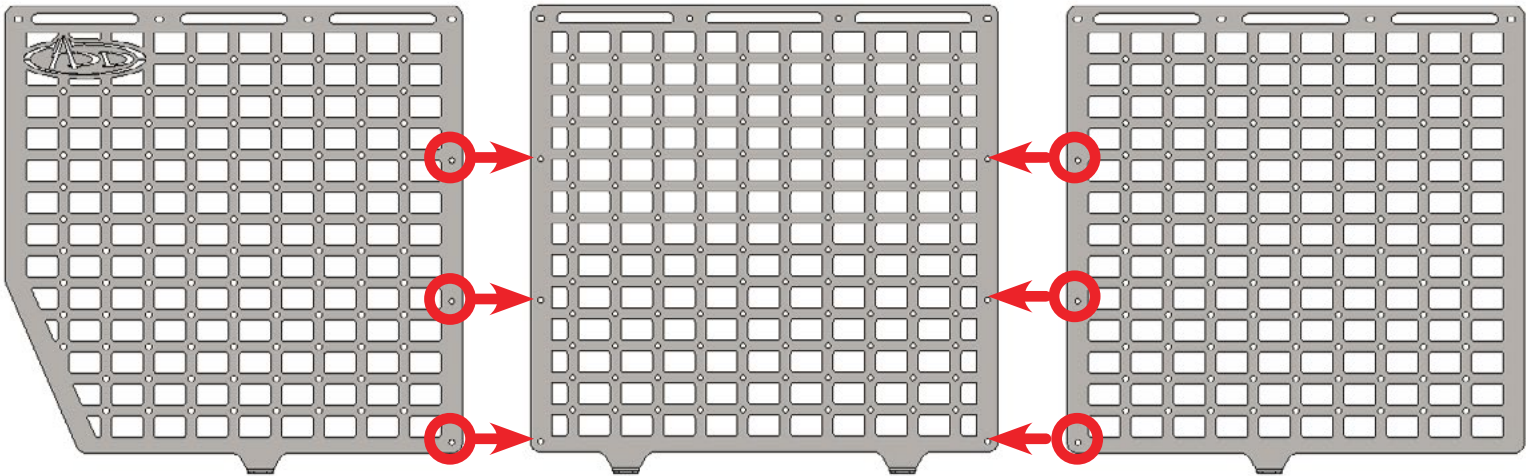


BED CAB MOLLE 2019-23/GMC/CHEVY 1500

INSTALL

STEP 2

Place the bed cab molle into the bed as shown below.

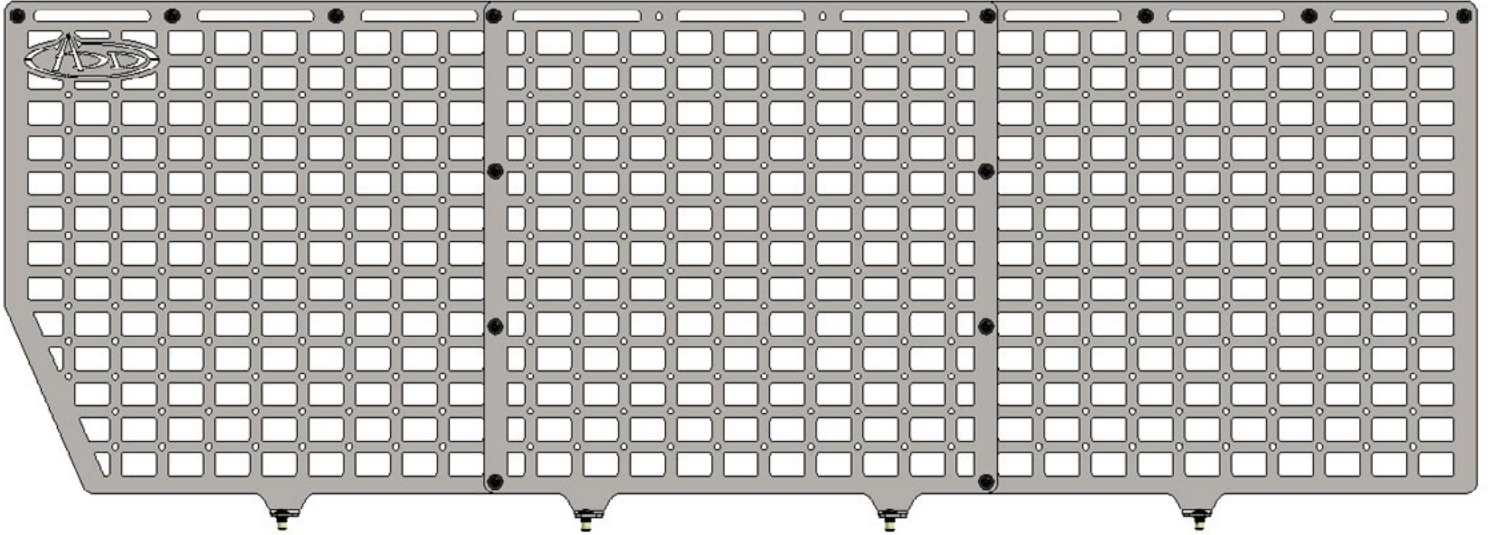


BED CAB MOLLE 2019-23/GMC/CHEVY 1500

INSTALL

□ STEP 3

Mark all 12x mounting holes as shown below and remove the bed cab molle and set aside.

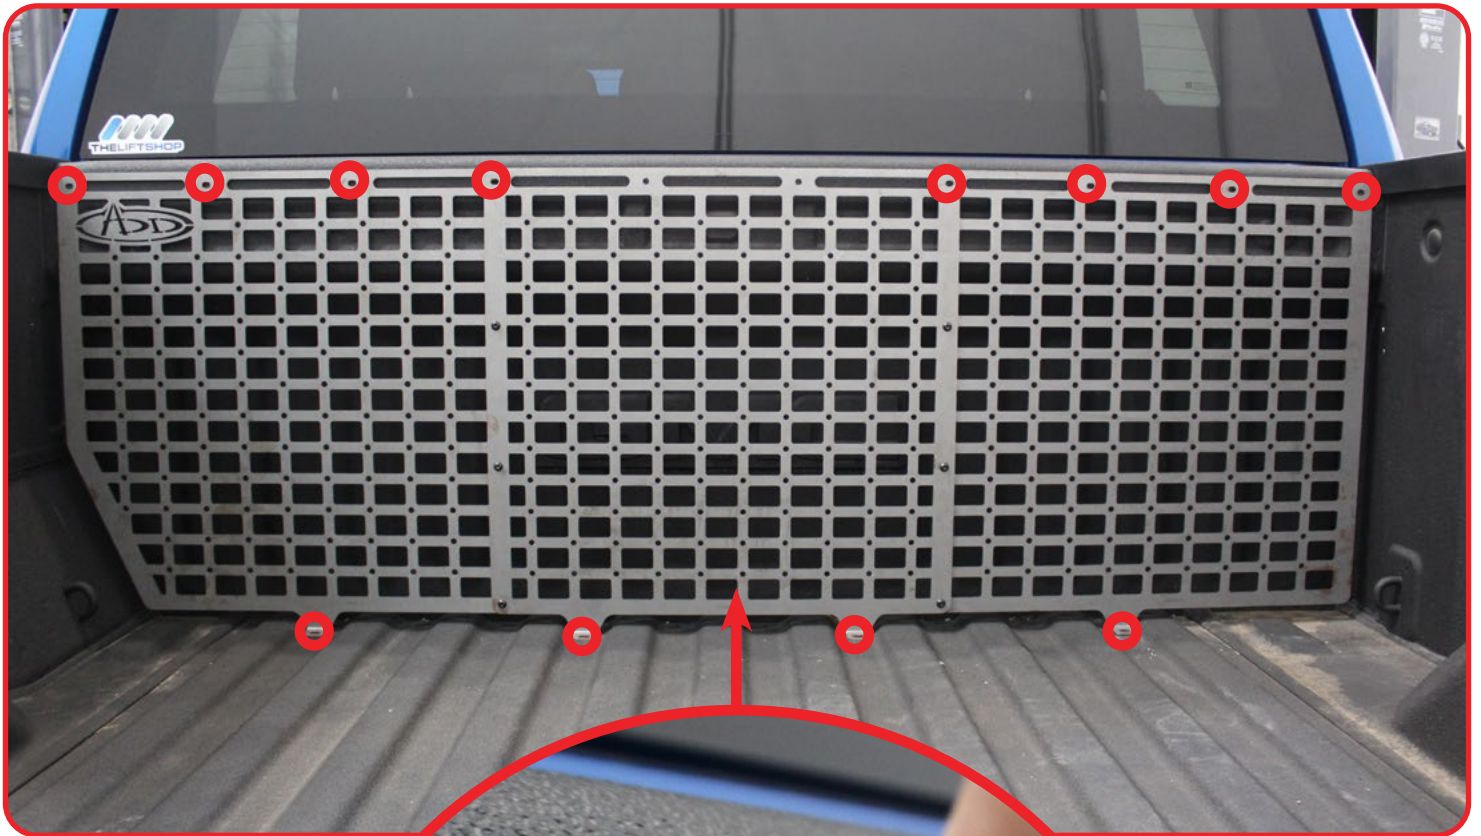

BED CAB MOLLE
2019-23/GMC/CHEVY 1500

INSTALL

STEP 4

Using a (25/64 drill bit), Drill the marked holes from step 3.



BED CAB MOLLE 2019-23/GMC/CHEVY 1500

INSTALL

□ STEP 5


Using a (rivet nut hand tool), install the provided **(B)** 1/4-20" rivet nuts as shown below.



TECH TIP

If you do not have a rivet nut tool, use a 1/4-20 x 3/4 hex head bolt, a 1/4 washer, and a 3/8 nut to install the rivet nuts. Tighten using a (9/16 wrench) and a (7/16 socket) on a impact.

****HARDWARE NOT INCLUDED****

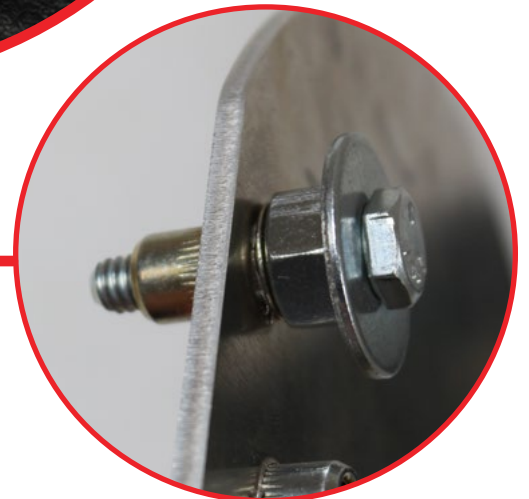


BED CAB MOLLE 2019-23/GMC/CHEVY 1500

INSTALL

□ STEP 6

Using a (5/32 allen), Install the bed cab molle with the provided (A, A1) 1/4-20 X 3/4" button head bolt, 1/4" flat washer as shown below.

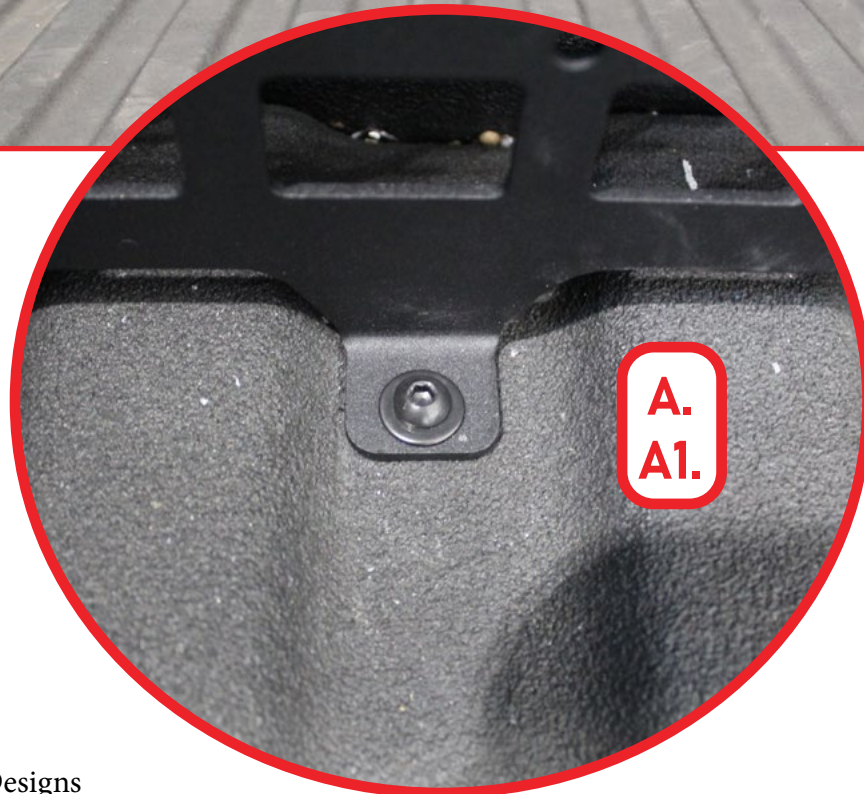

BED CAB MOLLE
2019-23/GMC/CHEVY 1500

FINAL

STEP 7

Stand back and enjoy your new ADD Bed Cab Molle.

Check and re-tighten, if needed, all mounting bolts after 100 miles and periodically thereafter.



THIS PRODUCT IS PROTECTED BY ONE OR MORE U.S. PATENTS
WWW.ADDICTIVEDESERTDESIGNS.COM/PATENTS

FOR ADDITIONAL SUPPORT OR TECHNICAL QUESTIONS,
PLEASE CALL 480-671-0820 OR
EMAIL INFO@ADDICTIVEDESERTDESIGNS.COM