



# INSTALLATION GUIDE

## 2025-UP/RAM RHO

### STEALTH FIGHTER FRONT BUMPER WINCH MOUNT

AC630810103



#### TOOLS REQUIRED

(Allen) 5/32, 7/32  
(Wrench) 13mm, 16mm, 18mm, 21mm, 9/16  
(Socket) 13mm, 16mm, 18mm, 21mm, 9/16  
Ratchet  
Flat Head/Fastener Remover  
Cutting tools



#### TIME REQUIRED

- 1 hour for OEM Removal/Winch Install



#### SKILL LEVEL



Medium

**\*\*This installation requires 2 people for best results\*\***



## WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION



**-BEFORE YOU INSTALL THIS KIT-**

**Read and understand all instructions,** warnings, cautions, & notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.

Customer Service (480) 671-0820

Addictive desert designs is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components.

We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these

components and the safety of the vehicle.

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information:


1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover

**\*ALWAYS WEAR EYE PROTECTION  
WHEN OPERATING POWER TOOLS\***



## PARTS

**A.**

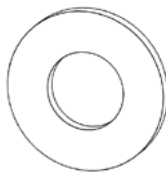

SAC0105

QTY: 6





# INSTALLATION GUIDE

## STEALTH FIGHTER FRONT BUMPER WINCH MOUNT 2025-UP/RAM RHO

## REMOVAL

### □ STEP 1

Remove the plastic shroud shown below using a (fastener removal tool) to remove the retainers located on both driver, passenger, and below shown in the pictures below.

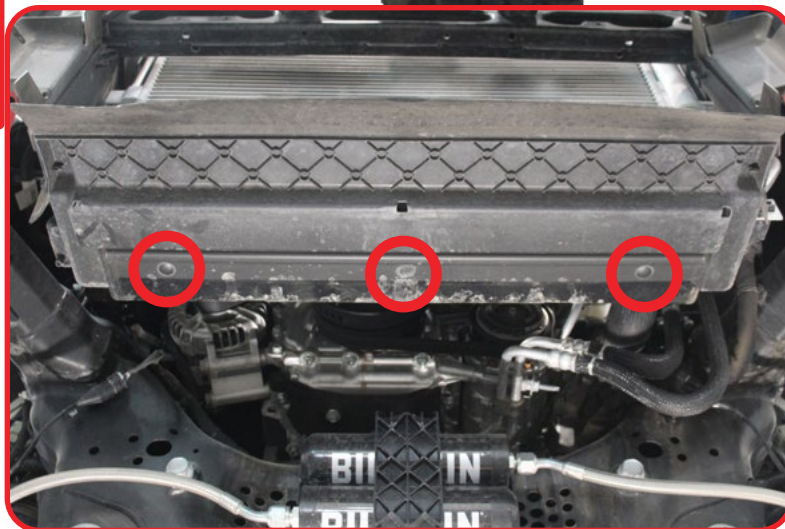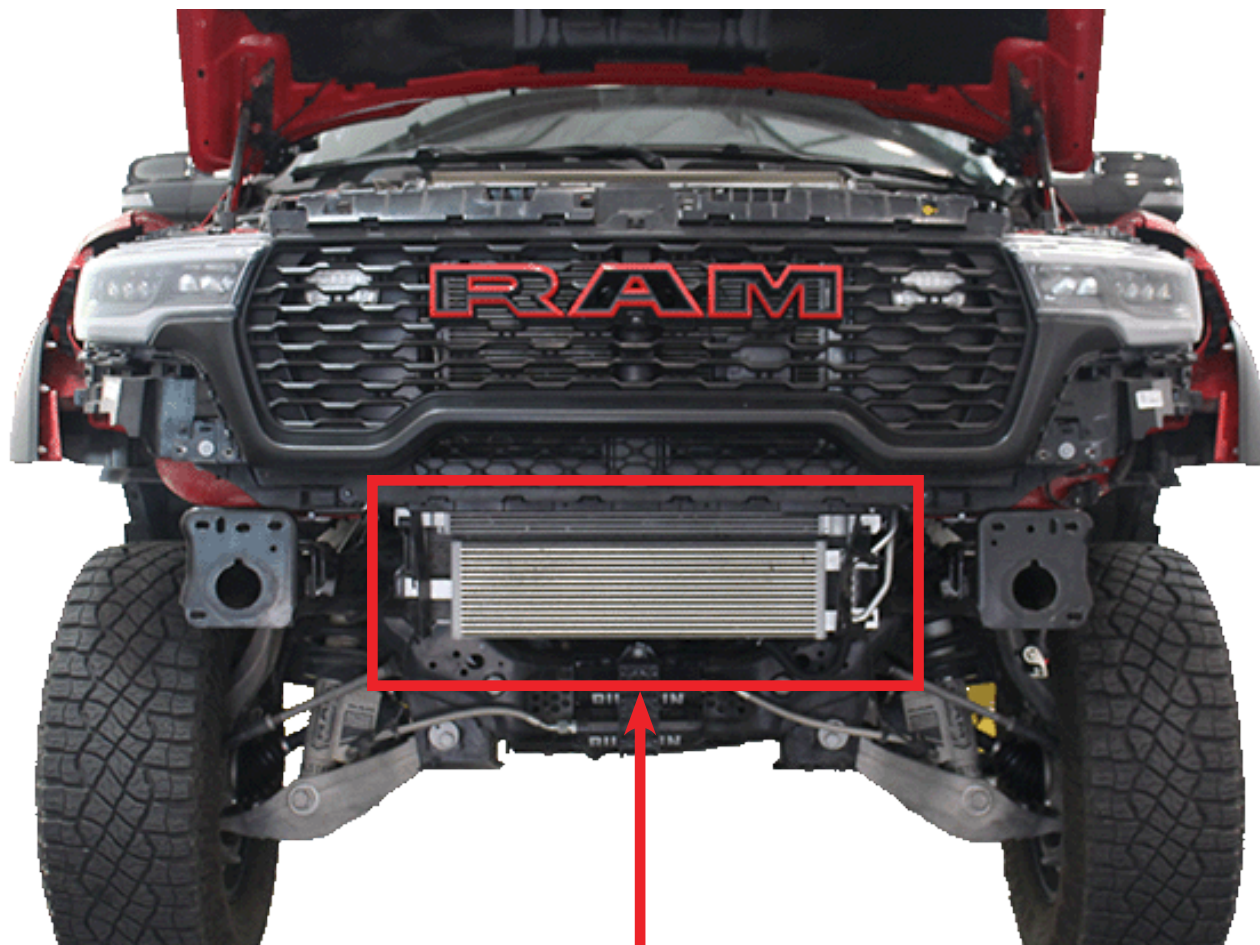





# INSTALLATION GUIDE

## STEALTH FIGHTER FRONT BUMPER WINCH MOUNT 2025-UP/RAM RHO

## REMOVAL

### □ STEP 2

With your choice of cutting tools, cut the rubber shroud as shown below on both driver and passenger. **\*\*CAUTION: DO NOT CUT INTO THE COOLING SYSTEMS OR LINES\*\***






# INSTALLATION GUIDE

## STEALTH FIGHTER FRONT BUMPER WINCH MOUNT 2025-UP/RAM RHO

## REMOVAL

### □ STEP 3

Using your choice of cutting tools, cut the mounting tabs shown below and ensure to paint over it to prevent rust.

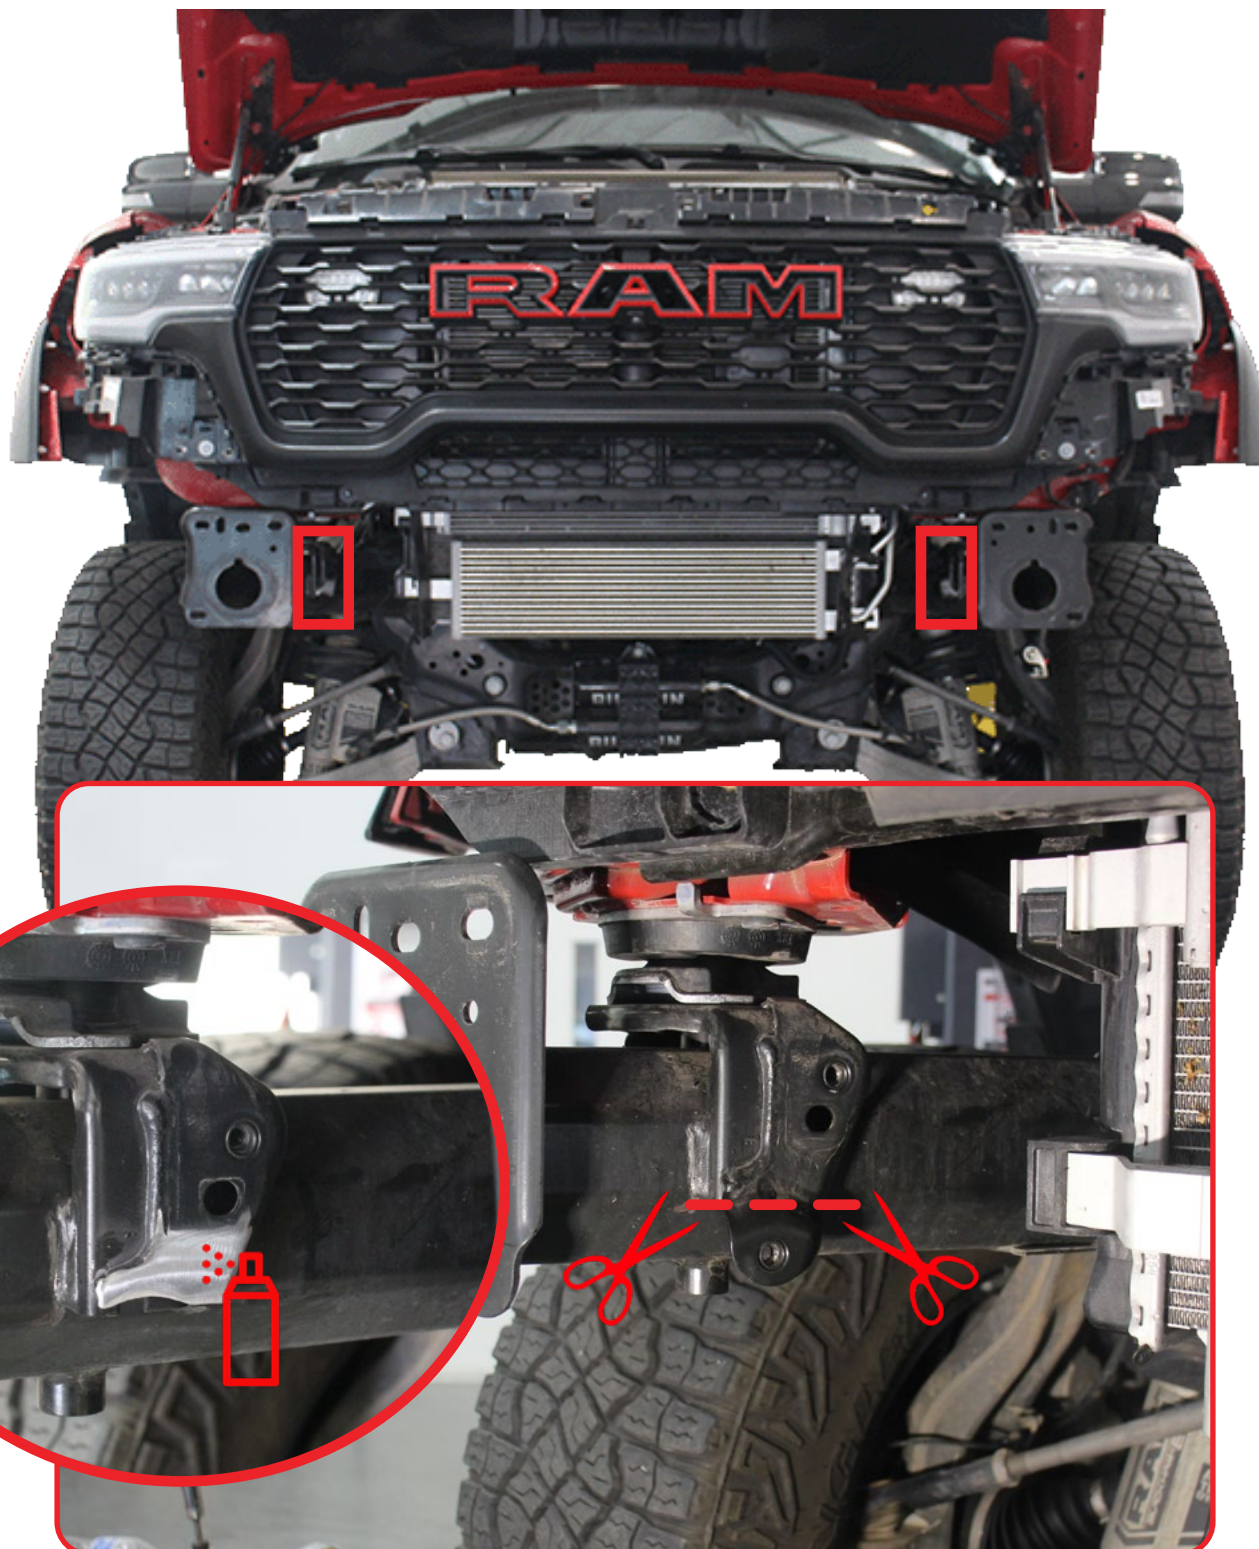





# INSTALLATION GUIDE

## STEALTH FIGHTER FRONT BUMPER WINCH MOUNT 2025-UP/RAM RHO

## REMOVAL

### □ STEP 4

Remove the control pack from the Warn EVO winch using a (5/32 allen) on the mounting hardware as shown below. **\*\*KEEP HARDWARE\*\***





# INSTALLATION GUIDE



## STEALTH FIGHTER FRONT BUMPER WINCH MOUNT

2025-UP/RAM RHO

## INSTALL

### □ STEP 5

Install the winch into the mounting holes shown below with the provided hardware sent with your Warn EVO using a (16mm socket).

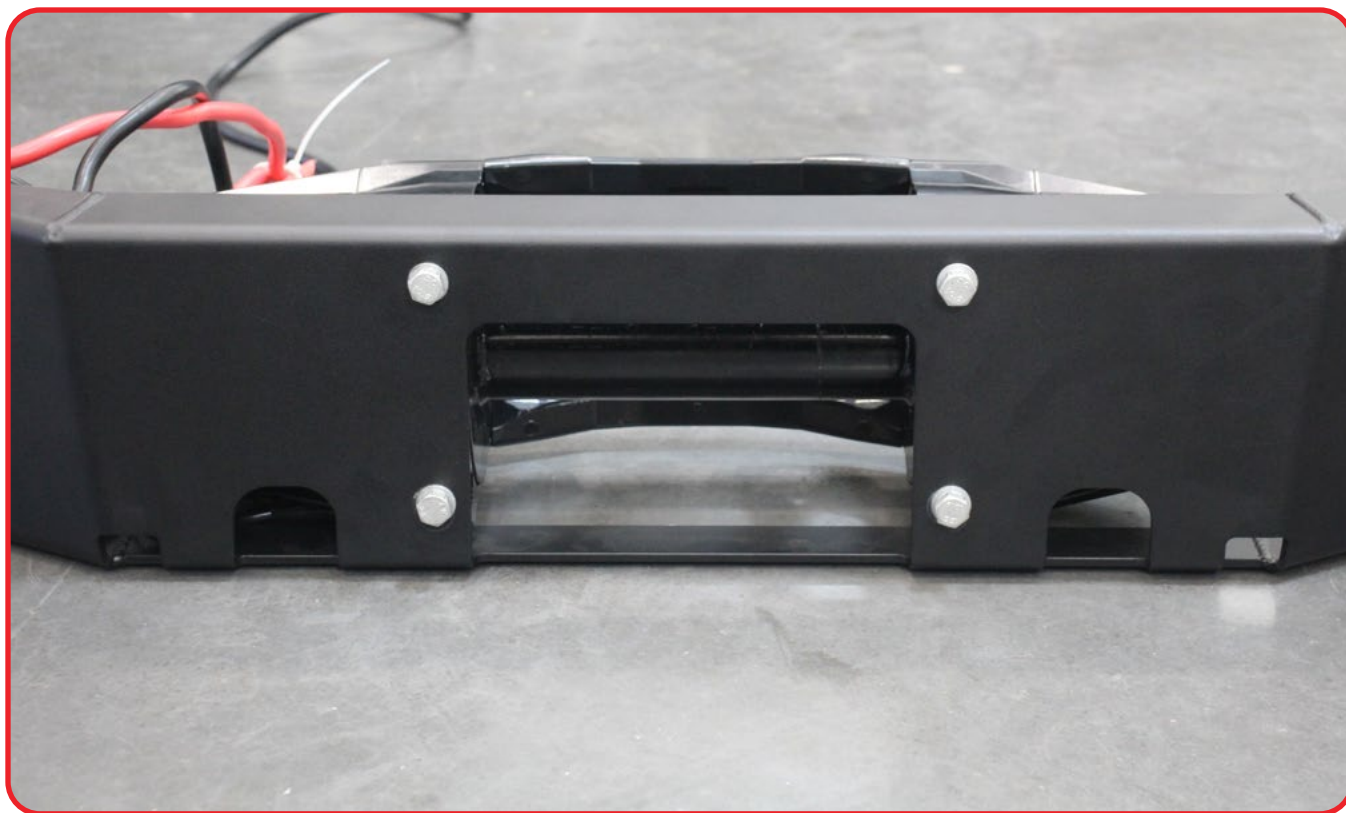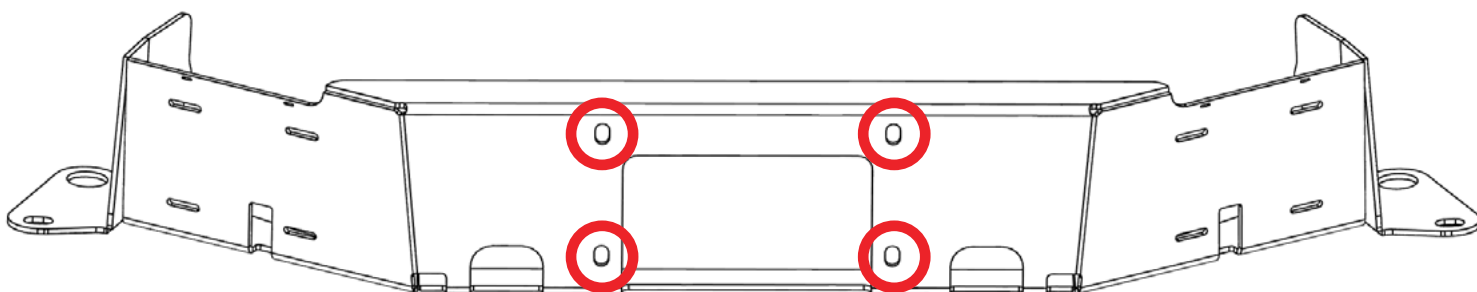



# INSTALLATION GUIDE



## STEALTH FIGHTER FRONT BUMPER WINCH MOUNT

2025-UP/RAM RHO

## INSTALL

### □ STEP 6

Mount the control pack on passenger side as shown below with the hardware removed from **step 4** using a (5/32 allen). Ensure that the wiring is not pinched between your control pack and winch.

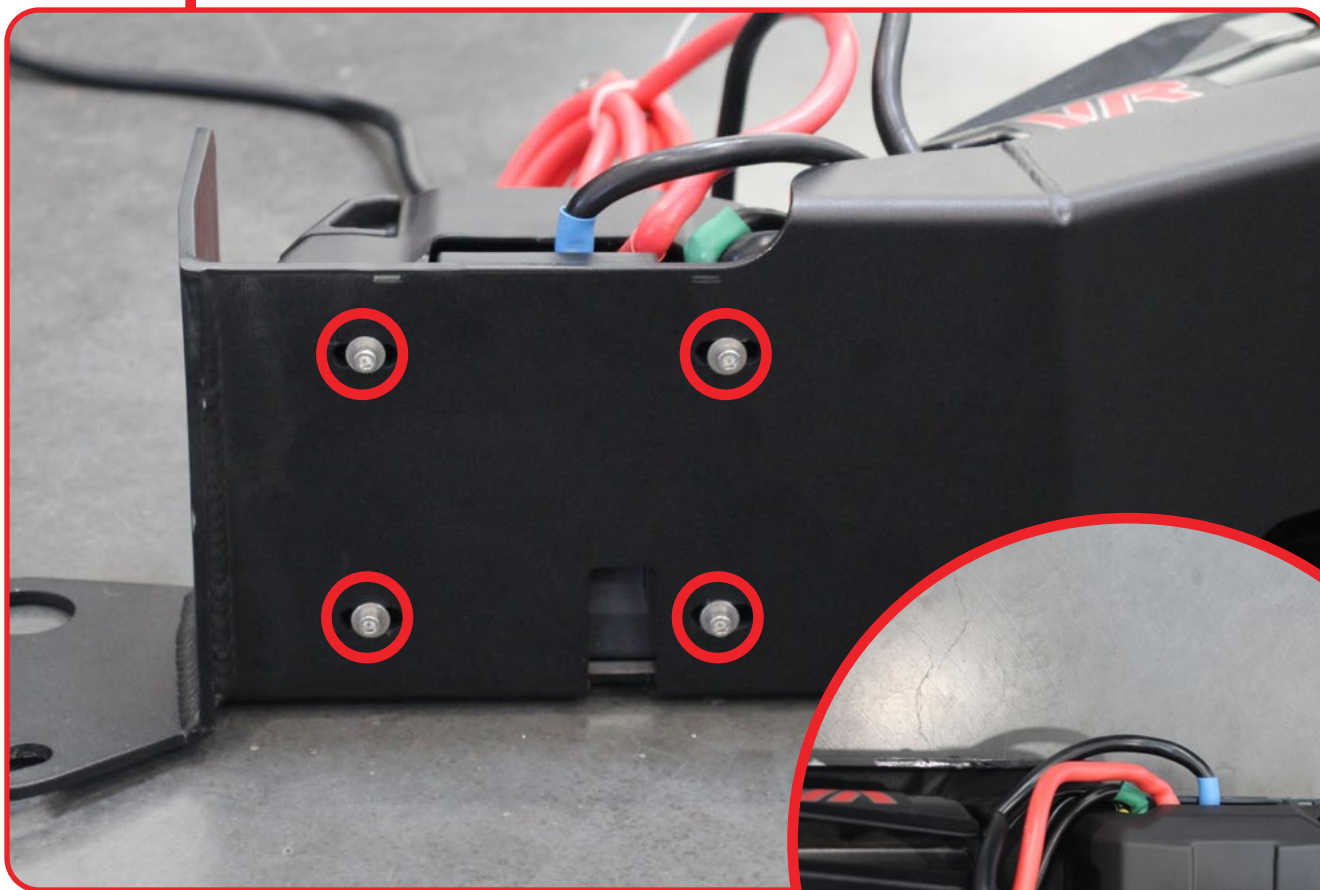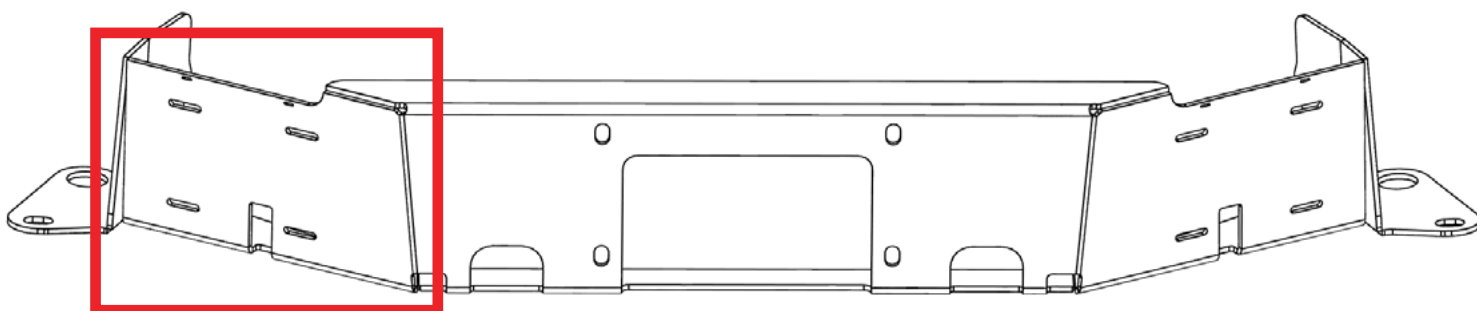





# INSTALLATION GUIDE


## STEALTH FIGHTER FRONT BUMPER WINCH MOUNT

2025-UP/RAM RHO

## INSTALL

### □ STEP 7

With a helping hand, install the winch with the hardware remove from the tow hooks using a (18mm socket) and a (21mm socket). for the rear frame bolts, ensure to install the provided (A) spacers (2 per side or more).

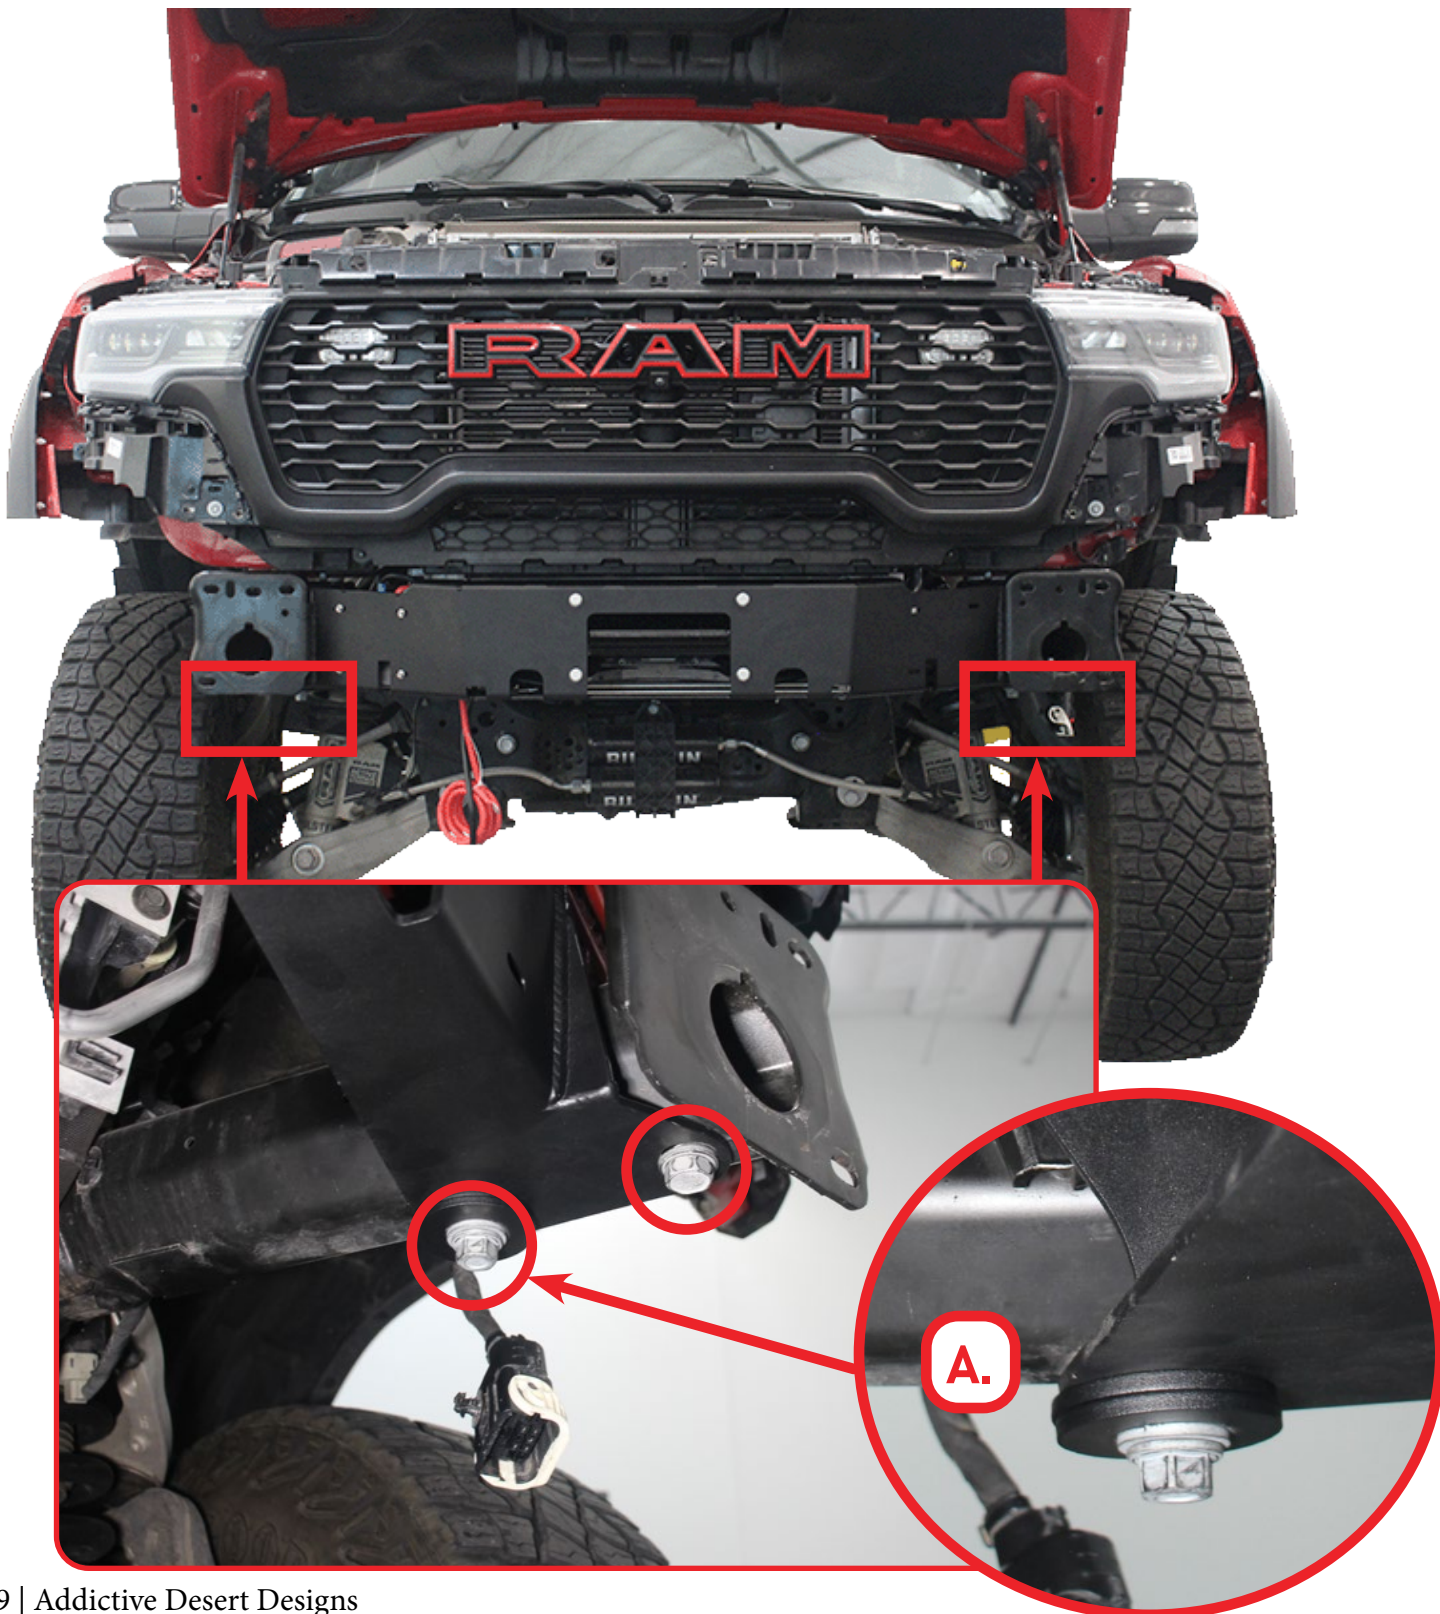





## STEALTH FIGHTER FRONT BUMPER WINCH MOUNT 2025-UP/RAM RHO

## INSTALL

### □ STEP 8

Install the OEM hardware removed from **step 8** on the Stealth Fighter Front install guide using a (13mm socket).






## STEALTH FIGHTER FRONT BUMPER WINCH MOUNT

2025-UP/RAM RHO

## INSTALL

### □ STEP 9

Install the skid plate that was provided with the winch mount with the 3/8" hardware removed using a (7/32 allen) and a (9/16 wrench) as shown below.

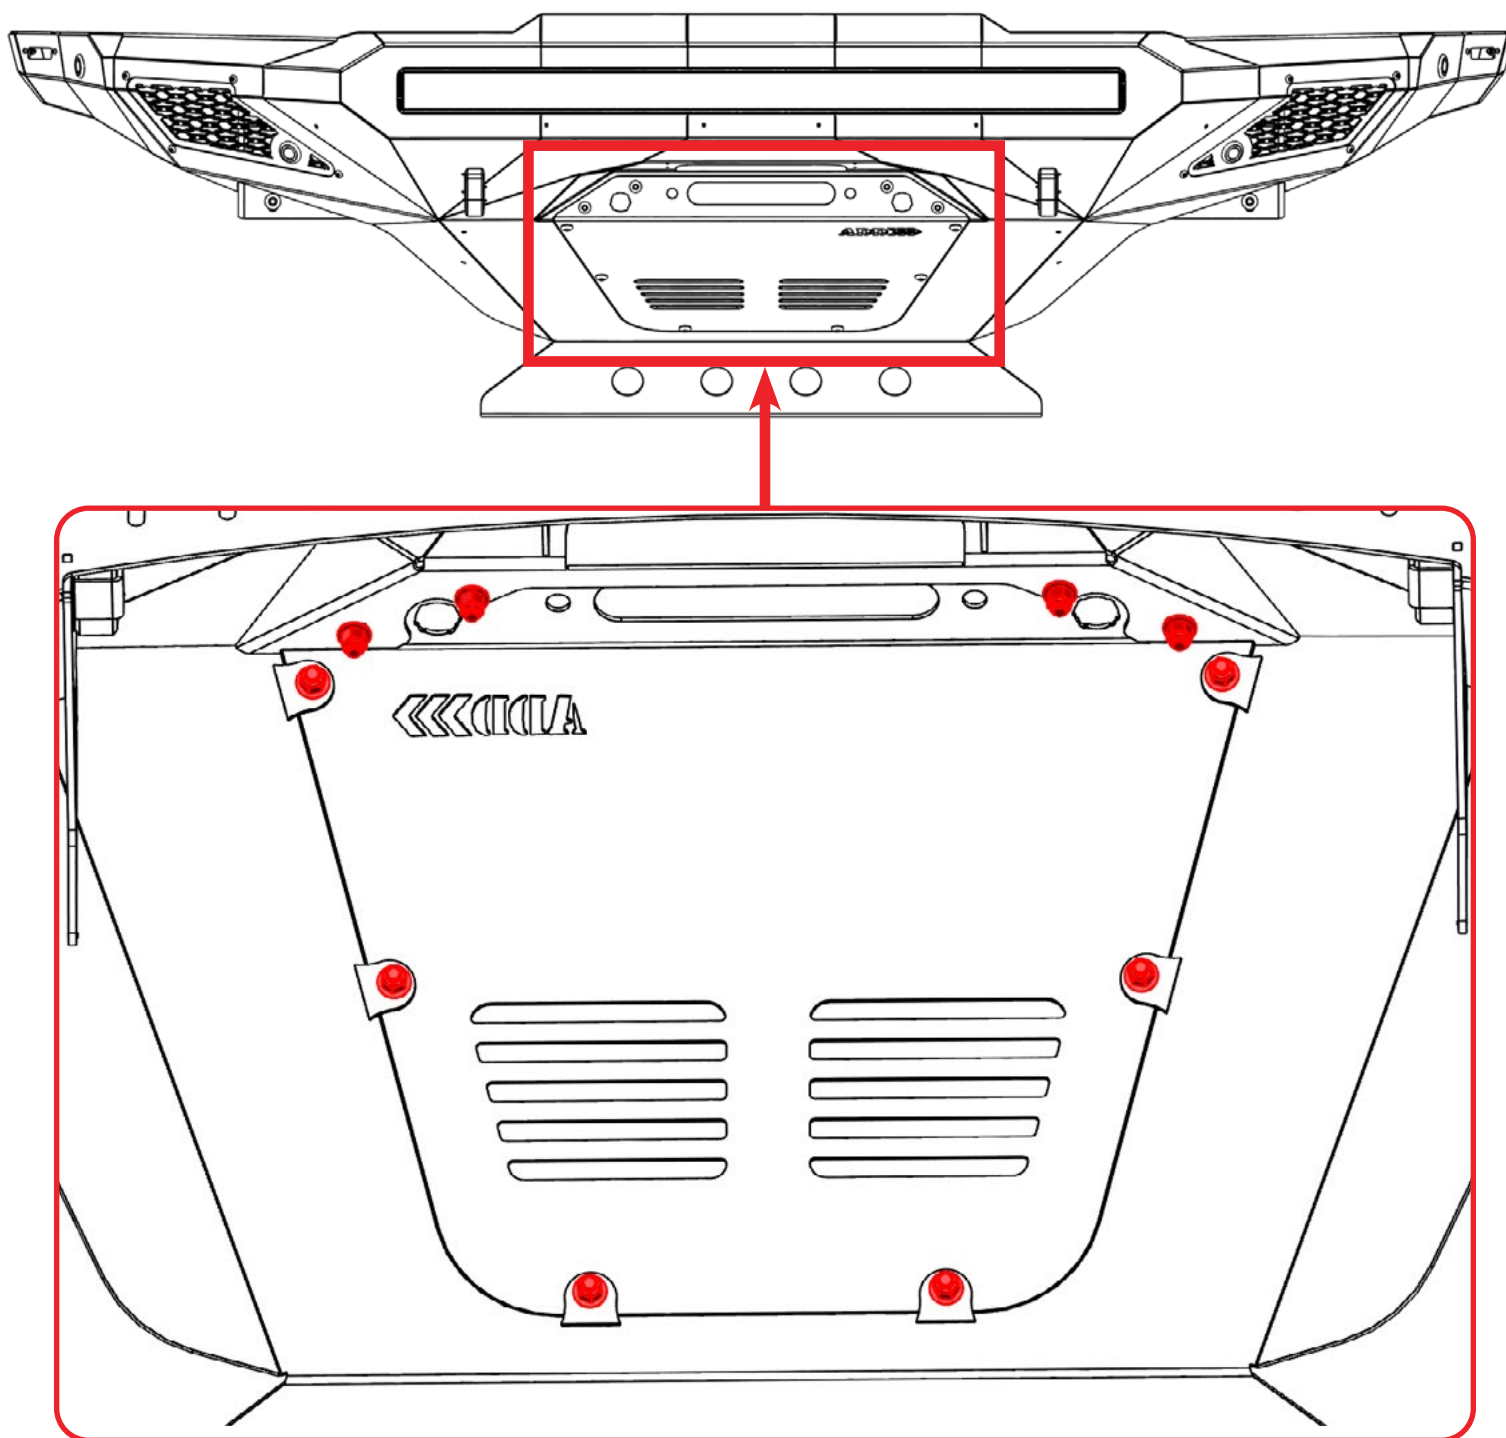





# INSTALLATION GUIDE



## STEALTH FIGHTER FRONT BUMPER WINCH MOUNT

2025-UP/RAM RHO

## INSTALL

### □ STEP 10

Install the fairlead and reference back to the **Stealth Fighter Front Bumper** install guide to finish the bumper install.

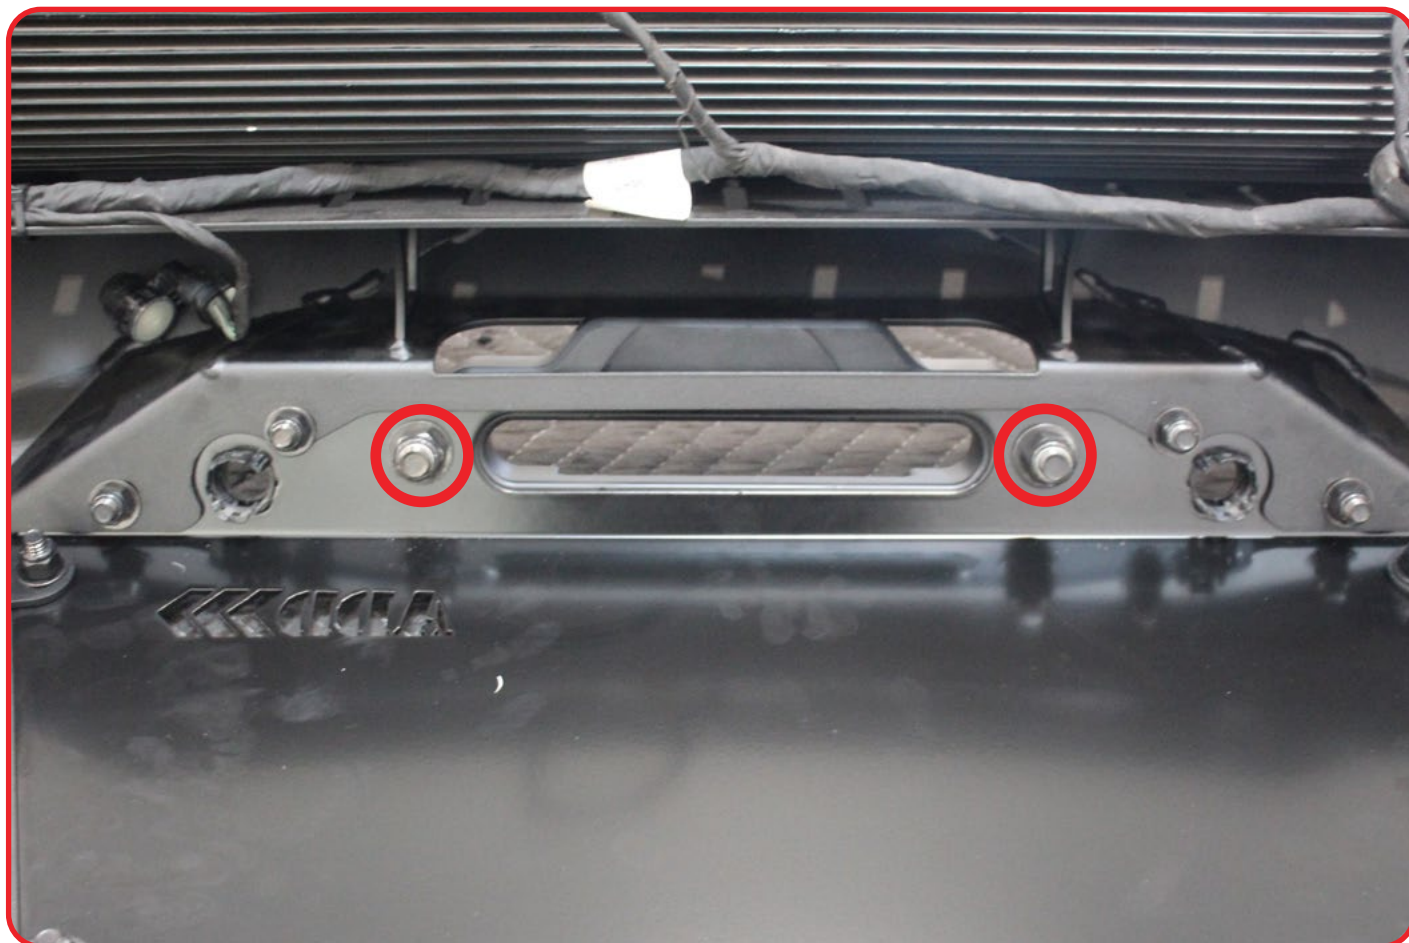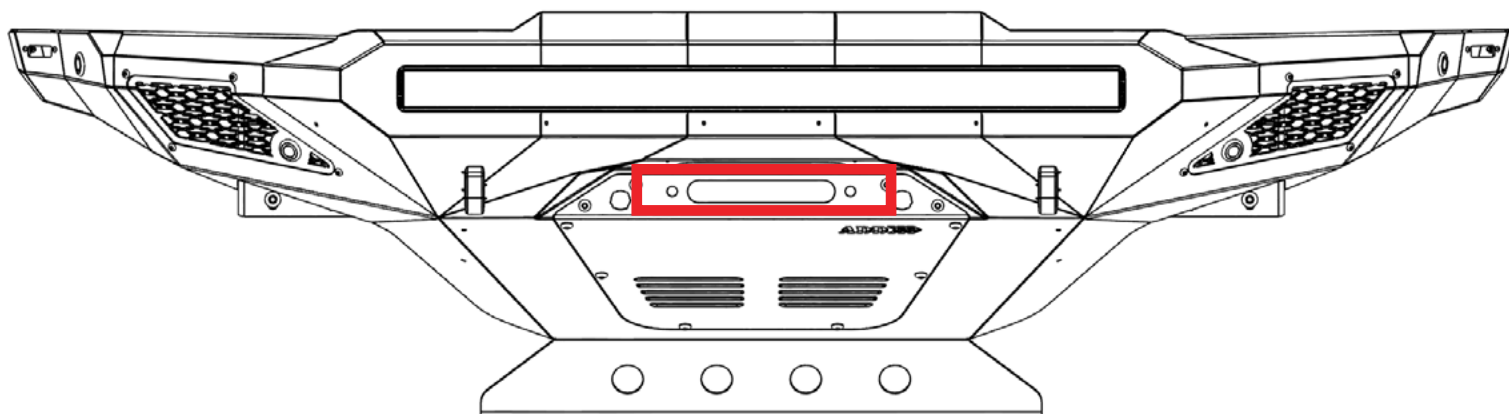



# INSTALLATION GUIDE

## STEALTH FIGHTER FRONT BUMPER WINCH MOUNT 2025-UP/RAM RHO

# FINAL

### □ STEP 11

Stand back and enjoy your new ADD Stealth Fighter Front Bumper Winch Mount.  
Check and re-tighten all mounting bolts after 100 miles and periodically thereafter.



THIS PRODUCT IS PROTECTED BY ONE OR MORE U.S. PATENTS  
[WWW.ADDICTIVEDESERTDESIGNS.COM/PATENTS](http://WWW.ADDICTIVEDESERTDESIGNS.COM/PATENTS)

FOR ADDITIONAL SUPPORT OR TECHNICAL QUESTIONS,  
PLEASE CALL 480-671-0820 OR  
EMAIL [INFO@ADDICTIVEDESERTDESIGNS.COM](mailto:INFO@ADDICTIVEDESERTDESIGNS.COM)