





INSTALLATION GUIDE

23+ / FORD SUPER DUTY

CENTER CONSOLE MOLLE

AC8104801NA

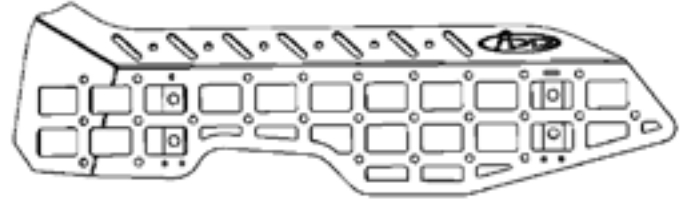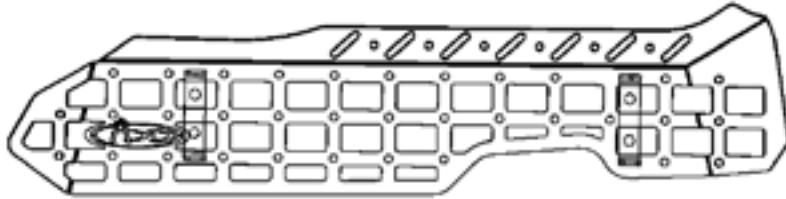

TOOLS REQUIRED

(Allen) 5/32

Ratchet

Step Up Drill Bit Or 25/64 Drill Bit

Rivet Nut Hand Tool

Tape Measure

Marker



TIME REQUIRED

- 30 minutes for Install



SKILL LEVEL



Easy

⚠ WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION ⚠

-BEFORE YOU INSTALL THIS KIT-

Read and understand all instructions, warnings, cautions, & notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.

Customer Service (480) 671-0820

Addictive desert designs is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components.

We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these

components and the safety of the vehicle. Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information:

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover

ALWAYS WEAR EYE PROTECTION WHEN OPERATING POWER TOOLS

HARDWARE

A.



1/4-20 X 3/4" BUTTON HEAD BOLT

QTY: 8

A1.



1/4" FLAT WASHER

QTY: 8

A2.



1/4-20" RIVET NUT

QTY: 8




INSTALLATION GUIDE

CENTER CONSOLE MOLLE 23+/FORD SUPER DUTY

INSTALL

□ STEP 1

Align the molle panel and clamp it to the center console. Using a level even out the molle panel and mark all holes. ****Repeat on passenger side****

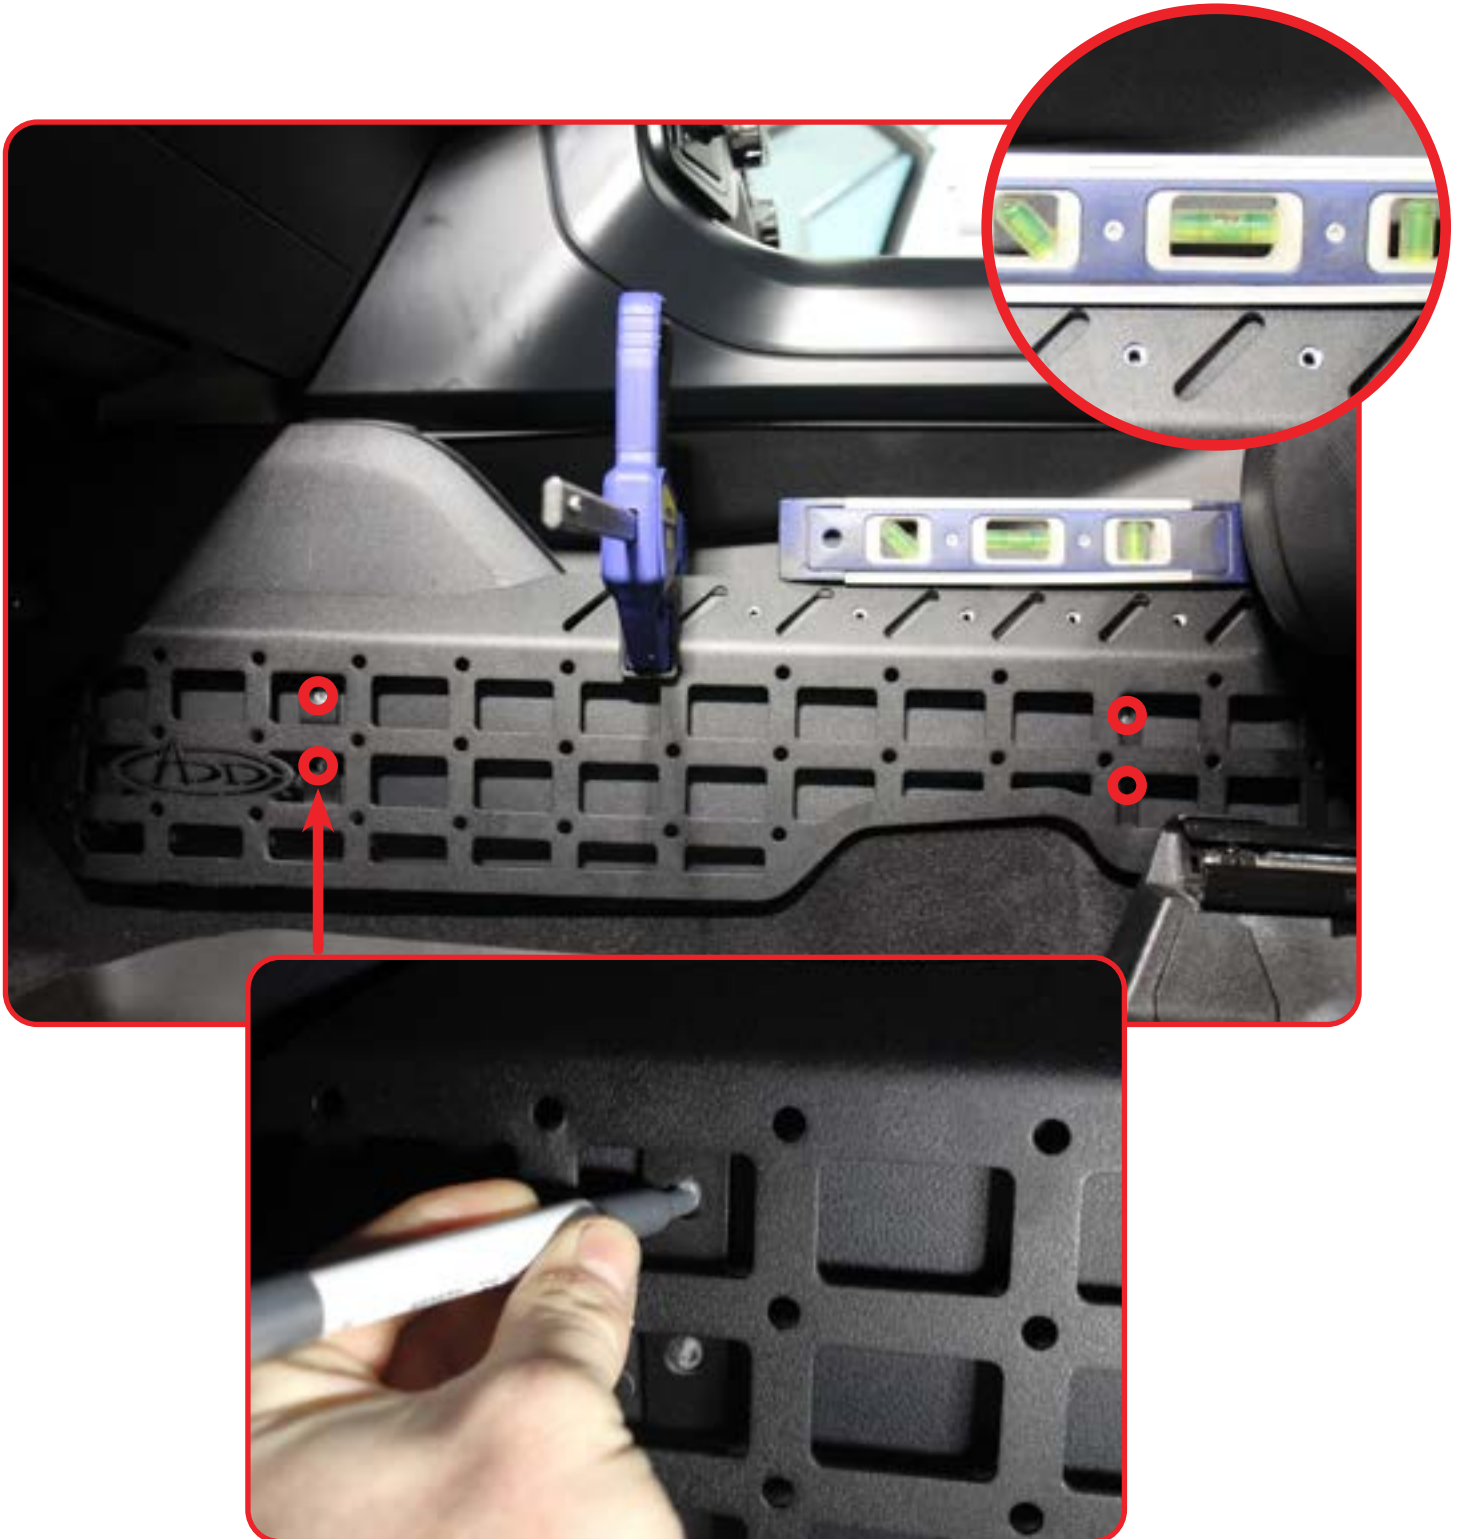



INSTALLATION GUIDE

CENTER CONSOLE MOLLE 23+ / FORD SUPER DUTY

INSTALL

□ STEP 2

Using a (25/64 drill bit) or a (7/16 hole with a step up bit) drill the holes marked on step 1. ****Repeat on passenger side****





INSTALLATION GUIDE

CENTER CONSOLE MOLLE 23+/FORD SUPER DUTY

INSTALL

□ STEP 3

Install the provided (A2) 1/4-20 rivet nut using a rivet nut hand tool or reference the tech tip below.
****Repeat on passenger side****



TECH TIP

If you do not have a rivet nut tool, use a 1/4-20 x 3/4 hex head bolt, a 1/4 washer, and a 3/8 nut to install the rivet nuts. Tighten using a (9/16 wrench) and a (7/16 socket) on a impact.

****HARDWARE NOT INCLUDED****





INSTALLATION GUIDE

CENTER CONSOLE MOLLE 23+/FORD SUPER DUTY

INSTALL

□ STEP 4

Next install the center console molle with the provided (A, A1) 1/4" hardware using a (5/32 allen).
****Repeat on passenger side****





INSTALLATION GUIDE

CENTER CONSOLE MOLLE 23+/FORD SUPER DUTY

FINAL

□ STEP 5

Stand back and enjoy your new ADD Center Console Molles

Check and re-tighten all mounting bolts after 100 miles and periodically thereafter.



THIS PRODUCT IS PROTECTED BY ONE OR MORE U.S. PATENTS
WWW.ADDICTIVEDESERTDESIGNS.COM/PATENTS

FOR ADDITIONAL SUPPORT OR TECHNICAL QUESTIONS,
PLEASE CALL 480-671-0820 OR
EMAIL INFO@ADDICTIVEDESERTDESIGNS.COM