

Preparation:

- Disconnect the negative battery terminal. Park the vehicle on level ground and set the emergency brake.
- We recommend reading through the installation instructions in whole before performing the work.
- Estimated Installation Time: **1 Hours**

*****This installation requires 2 people for best results*****

You will need the following tools:

- Ratchet
- 17mm Socket


Included in Kit:

12 - Hex Head Bolts (M10-1.50 x 30mm)

12 - Flat Washers (M10)

Installation:

1. Pull the six plastic body plugs (per side) on the underside of the truck's body. (Fig A)

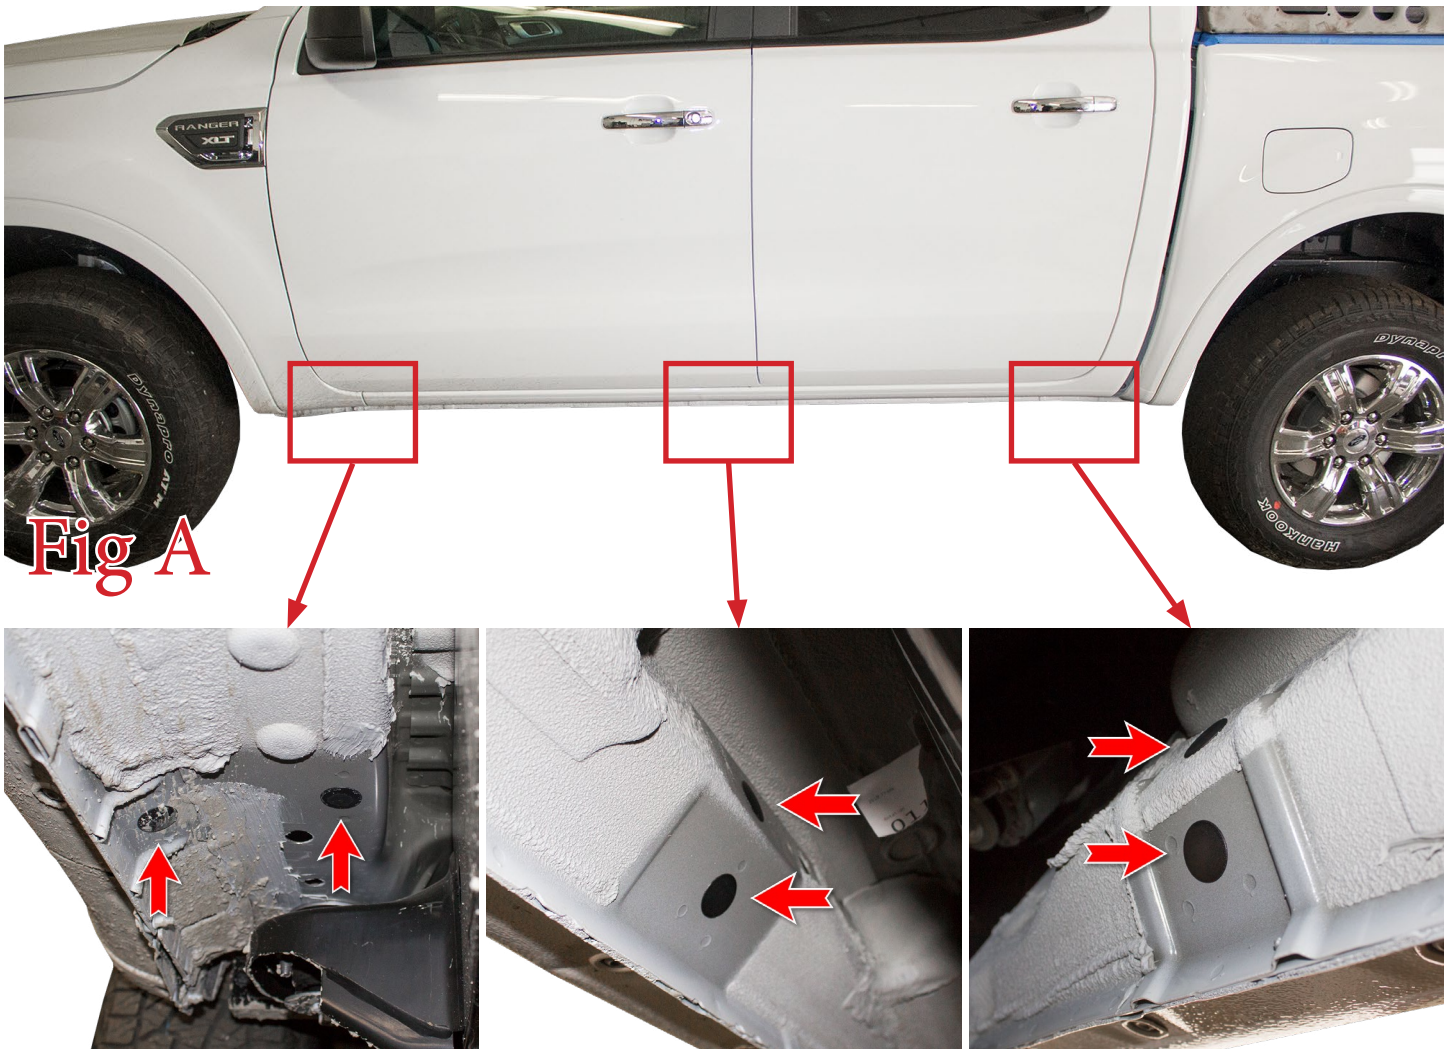

2. Set one of the side steps in place. Use the supplied M10 Bolts (x6) and M10 Washers (x6) to secure the step to the vehicle. Then, repeat this step on the other side of the vehicle. (Fig B)



3. Stand back and enjoy your new ADD Lite™ Side Steps.
4. Check and re-tighten, if needed, all mounting bolts after 100 miles and periodically thereafter.

