ADDICTIVE DESERT DESIGNS

2007.5 - 2014 CHEVY 2500
STEALTH FRONT BUMPER
INSTALLATION INSTRUCTIONS

PREPARATION STEPS

1. Set emergency brake.
2. You will need the following tools:
    a. Wrench and Socket
    b. Ratchet or Air Gun

    Note: This installation requires 2 people for best results

3. Included in Kit:
    a. Stealth Front Bumper

INSTALLATION INSTRUCTIONS

1. Remove stock bumper.
2. If you have purchased a light bar to place on your bumper, install them on your bumper at this time.
3. With the help of another person loosely install bumper onto truck using factory hardware.

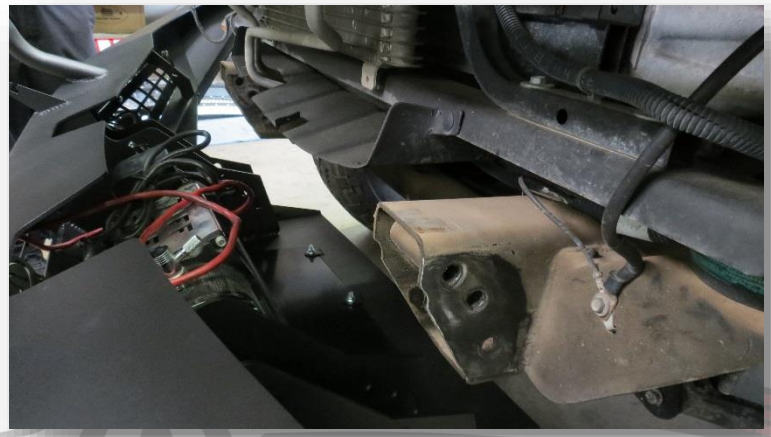

4. Align bumper and tighten into place.
5. Stand back and enjoy your A.D.D. Stealth Front Bumper!

For additional support or technical questions,
please call 480.671.0820 or
email info@addictivedesertdesigns.com

ADDICTIVE DESERT DESIGNS
4840 E. JASMINE STREET SUITE 112
MESA, AZ 85205
WWW.ADDICTIVEDESERTDESIGNS.COM