


# ***ADDICTIVE DESERT DESIGNS***

## **2007 - 2014 JEEP JK VENOM REAR BUMPER INSTALLATION INSTRUCTIONS**


### **PREPARATION STEPS**

1. Disconnect the negative terminal on the battery. With the vehicle on level ground and the emergency brake set.
  2. You will need the following tools:
    - a. 13MM Socket
    - b.  $\frac{3}{4}$ " Socket and Wrench
    - c. 15MM socket and ratchet
  3. Hardware Included:
    - a. 6 -  $\frac{1}{2}$ " x 1" Bolts
    - b. 6 -  $\frac{1}{2}$ " Nyloc Nuts
    - c. 12 - Washers
- 

### **INSTALLATION INSTRUCTIONS**

1. Remove factory Rear Bumper using a 15mm socket and ratchet.
2. If you purchased lights for the bumper, now is a good time to install them.
3. With the help of another person place your new bumper onto rear section of frame.

- Using factory hardware you will bolt your New Venom bumper to the frame. \*\*\*\*You will be bolting into the threaded holes in the frame\*\*\* Align Bumper and tighten bolts.

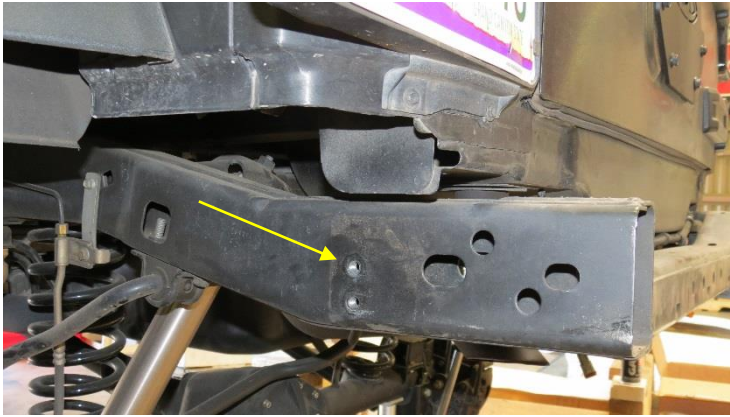

If you purchased the A.D.D. Venom Tire carrier, Steps 5 & 6 pertain to you.

- Remove factory tire carrier. Install A.D.D. tire carrier using factory hardware and 13mm socket.
- Place tire extension bracket on carrier and fasten with supplied (6) ½"x1" bolts, (6) ½" nylock nuts (12) washers.
- Step back and enjoy your new A.D.D. bumper.



- Check, and re-tighten if needed, all mounting bolts after 100 miles and periodically thereafter.

For additional support or technical questions,  
please call 480.671.0820 or  
email [info@addictivedesertdesigns.com](mailto:info@addictivedesertdesigns.com)

**ADDICTIVE DESERT DESIGNS**  
4840 E. JASMINE STREET SUITE 112  
MESA, AZ 85205  
[WWW.ADDICTIVEDESERTDESIGNS.COM](http://WWW.ADDICTIVEDESERTDESIGNS.COM)